
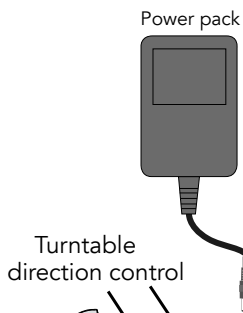
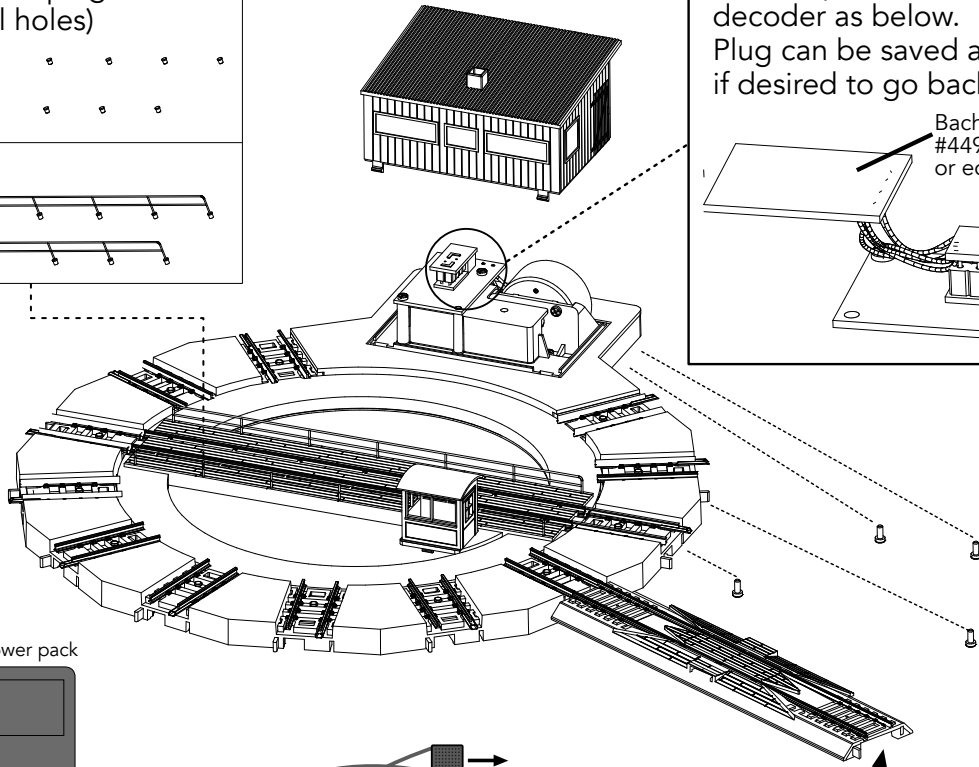
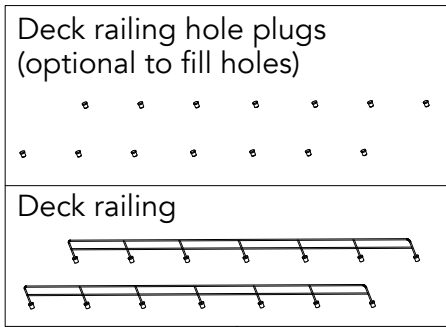


DCC MODE INSTRUCTIONS

(DCC power source required. Use Bachmann E-Z Command® or E-Z Command® Plus as shown or equivalent.)


DCC decoder installation:

Remove the supplied 8-pin dummy plug and install the decoder as below. Plug can be saved and reused if desired to go back to DC mode.

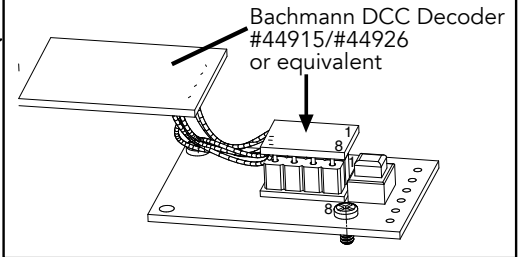


Power out to track
(Connector for E-Z Track® shown. If more length required use plug-in 10' red power extension wire #44498.)

4th track must connect to mainline track for power

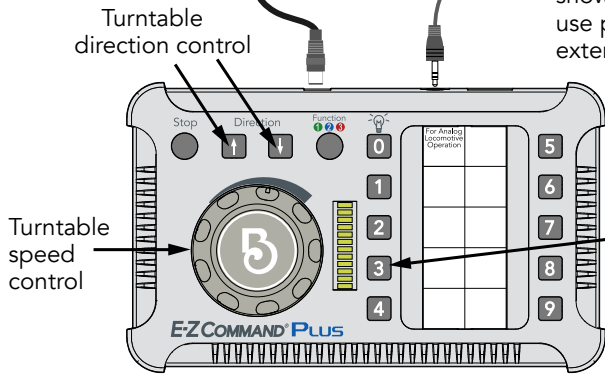


Select decoder address 3 for turntable control or reprogram if desired.

E-Z Command® Plus with power pack sold separately (#44933)

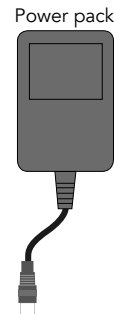



Power out to track
(Connector for E-Z Track® shown. If more length required use plug-in 10' red power extension wire #44498.)

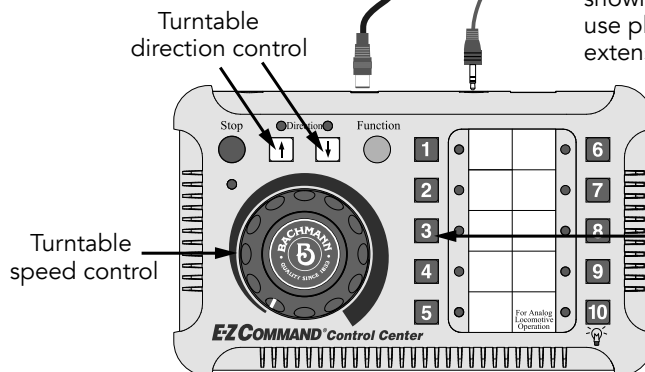


Select decoder address 3 for turntable control or reprogram if desired.

E-Z Command® Control Center with power pack sold separately (#44932)


(Separate power sources required for both track and turntable operation)

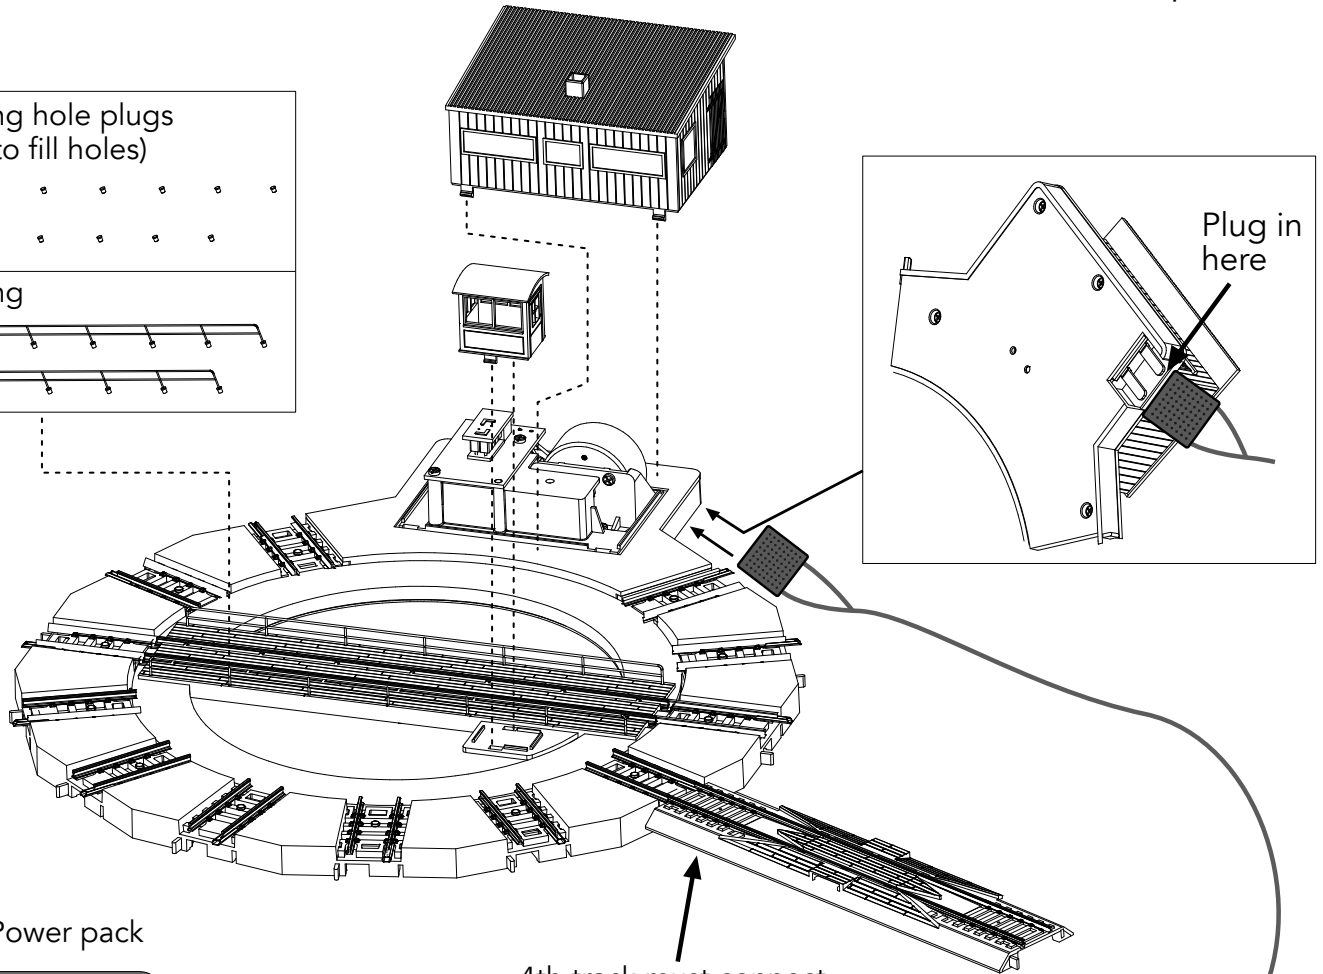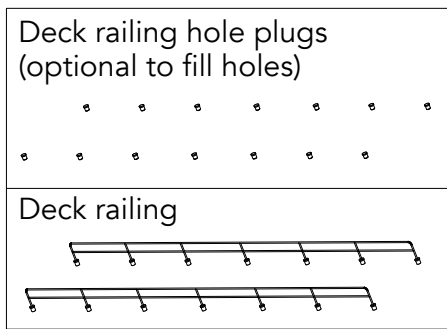


Power pack

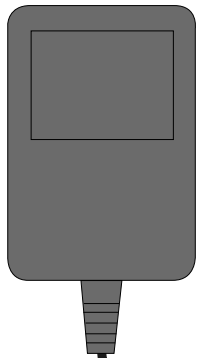

Wider flat plug

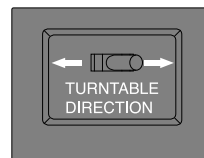

(If more length required, use plug-in 10' red power extension wire #44498.)

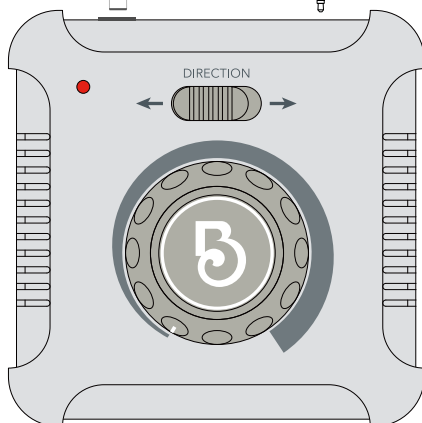

Speed controller for turntable sold separately (#44211)

