



**TO CHANGE THE DECODER**  
 1. REMOVE THE DUMMY PLUG  
 2. INSTALL 8 PINS DECODER BY TOOL AS BELOW

PC Board