


How to locate the chuff adjuster

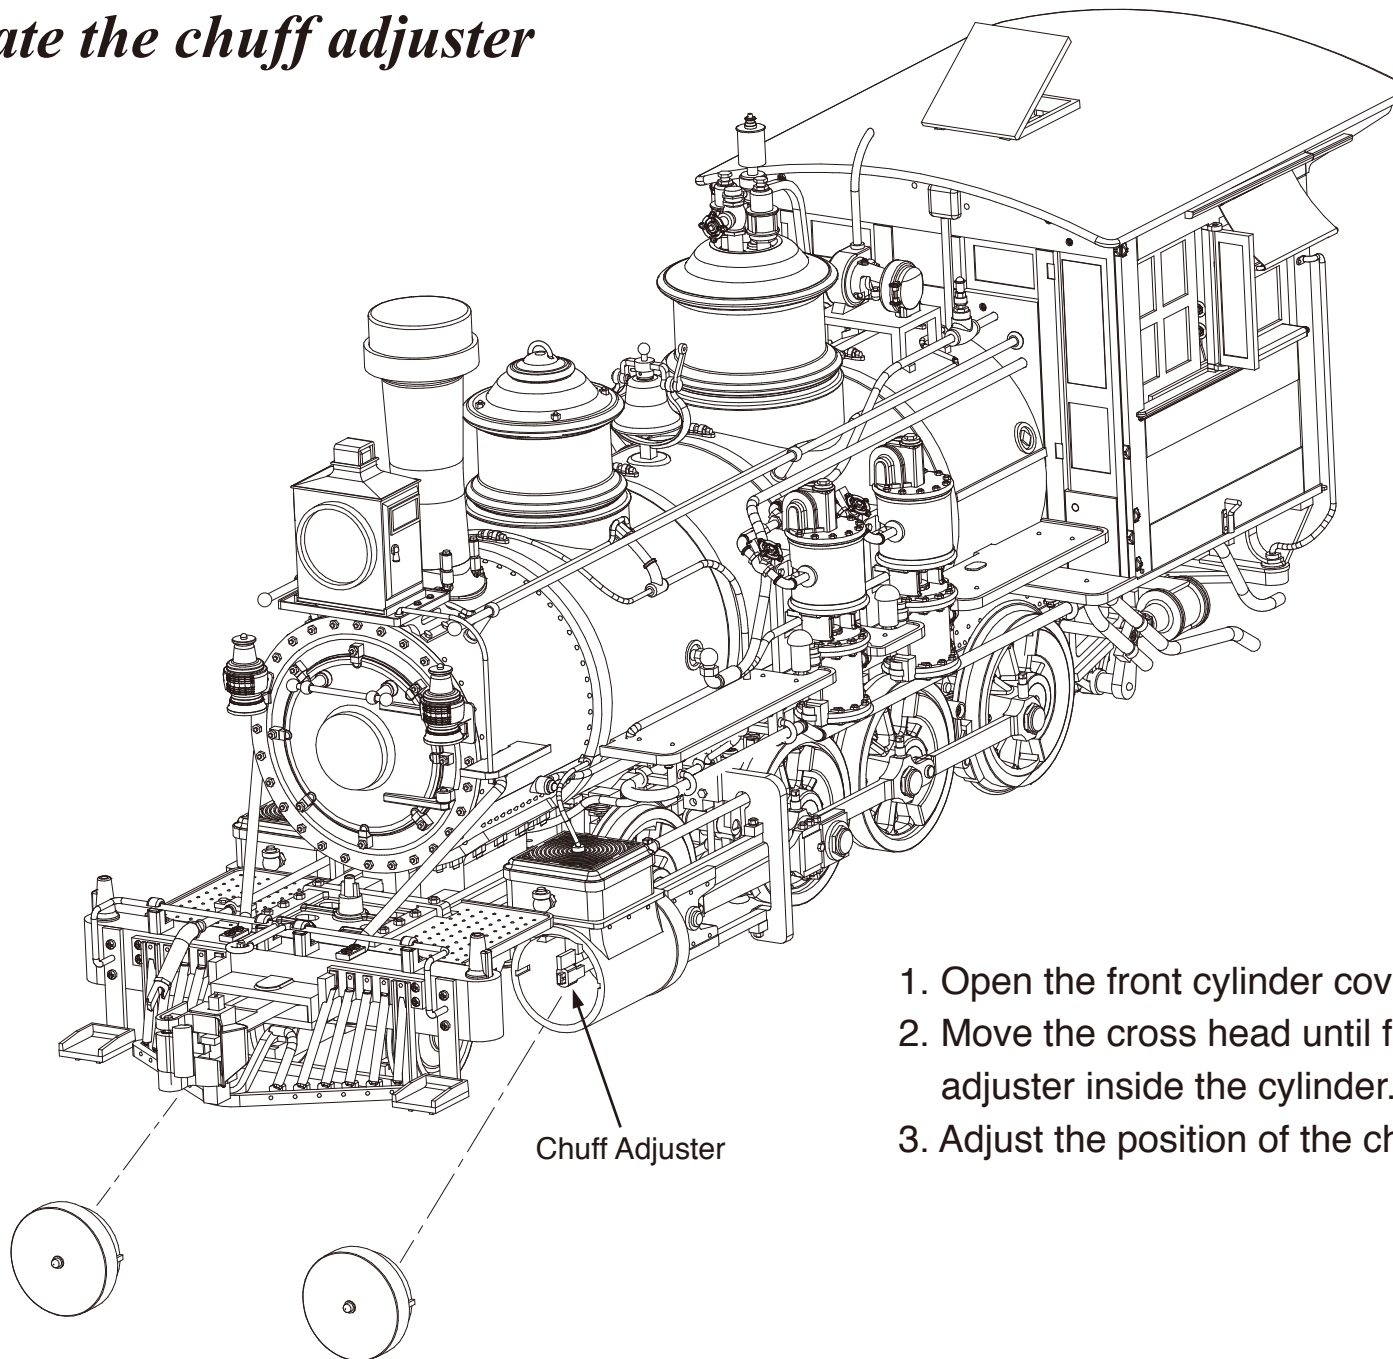

1. Open the front cylinder cover (both sides).
2. Move the cross head until find out the chuff adjuster inside the cylinder.
3. Adjust the position of the chuff adjuster.

Chuff Adjuster