


How to access the interface circuit board

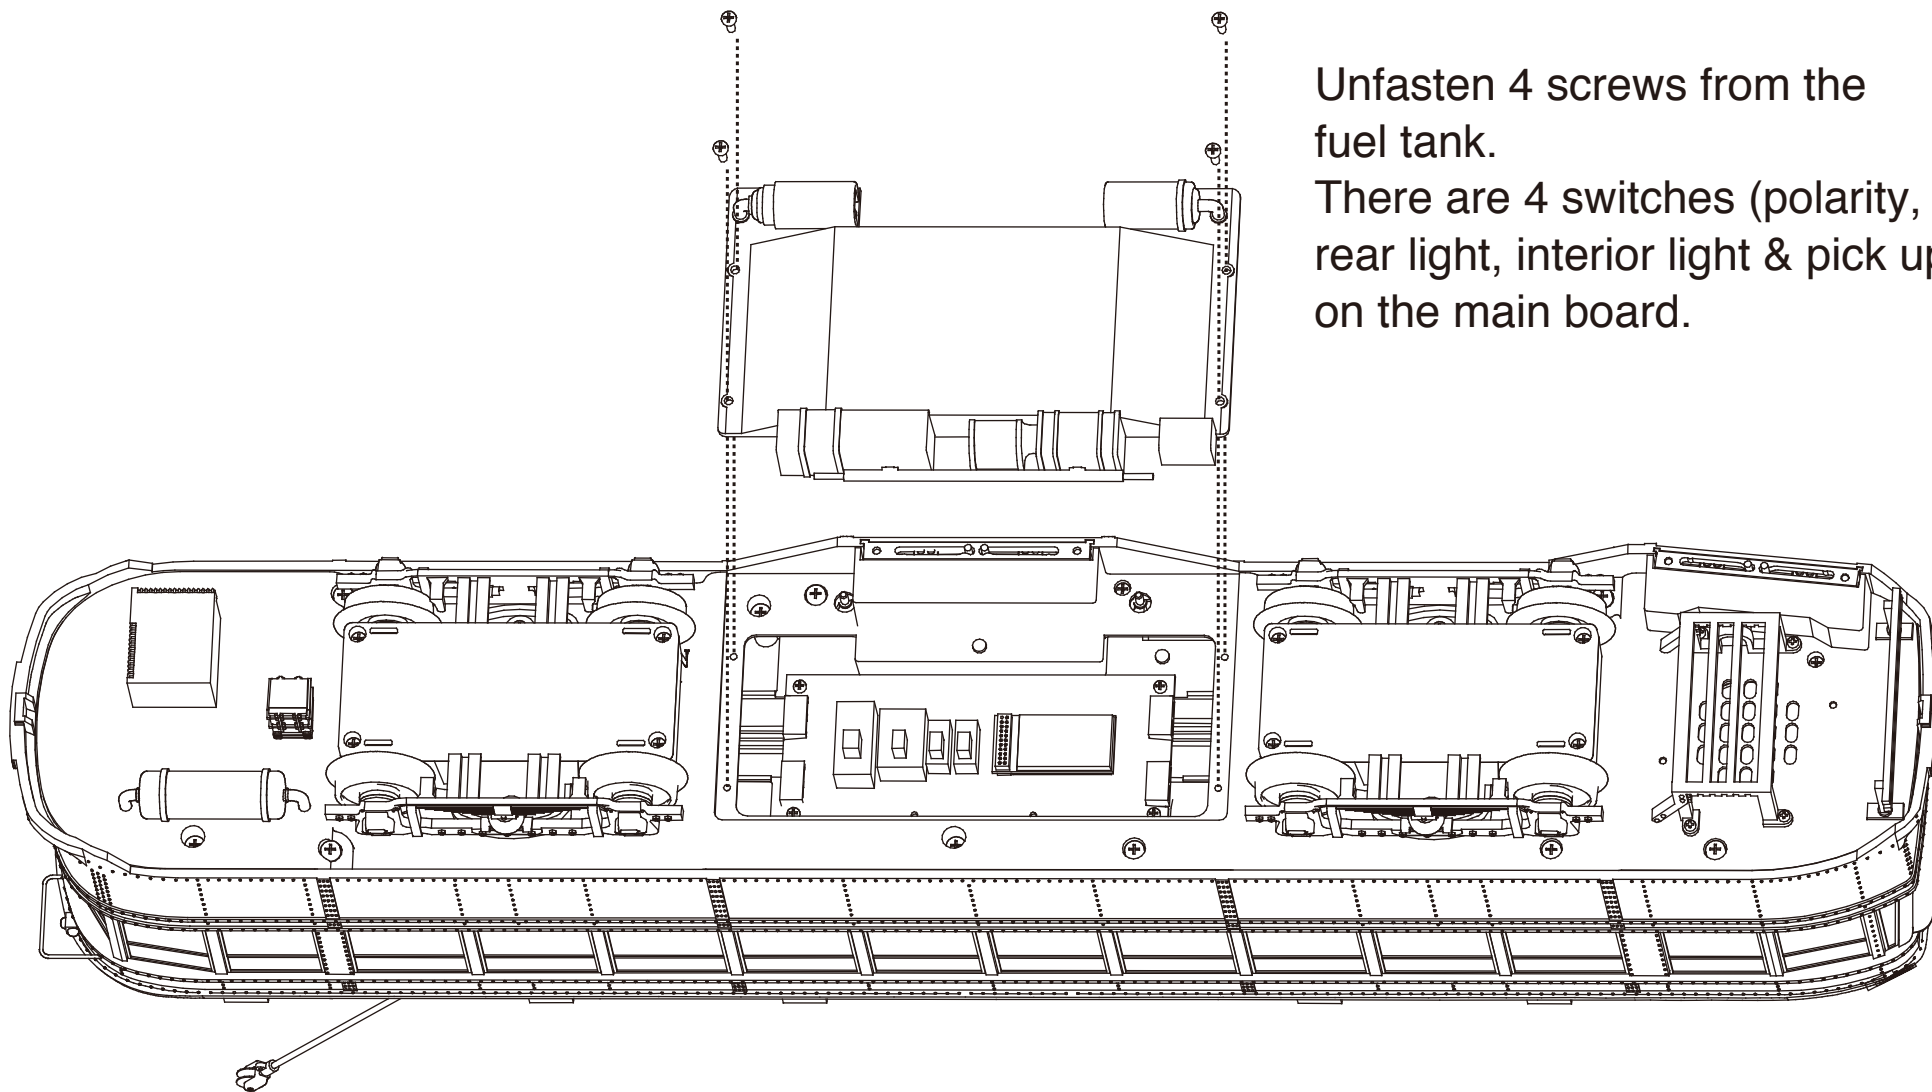

Unfasten 4 screws from the fuel tank.

There are 4 switches (polarity, rear light, interior light & pick up) on the main board.