FRONT TRUCK ASSEMBLY

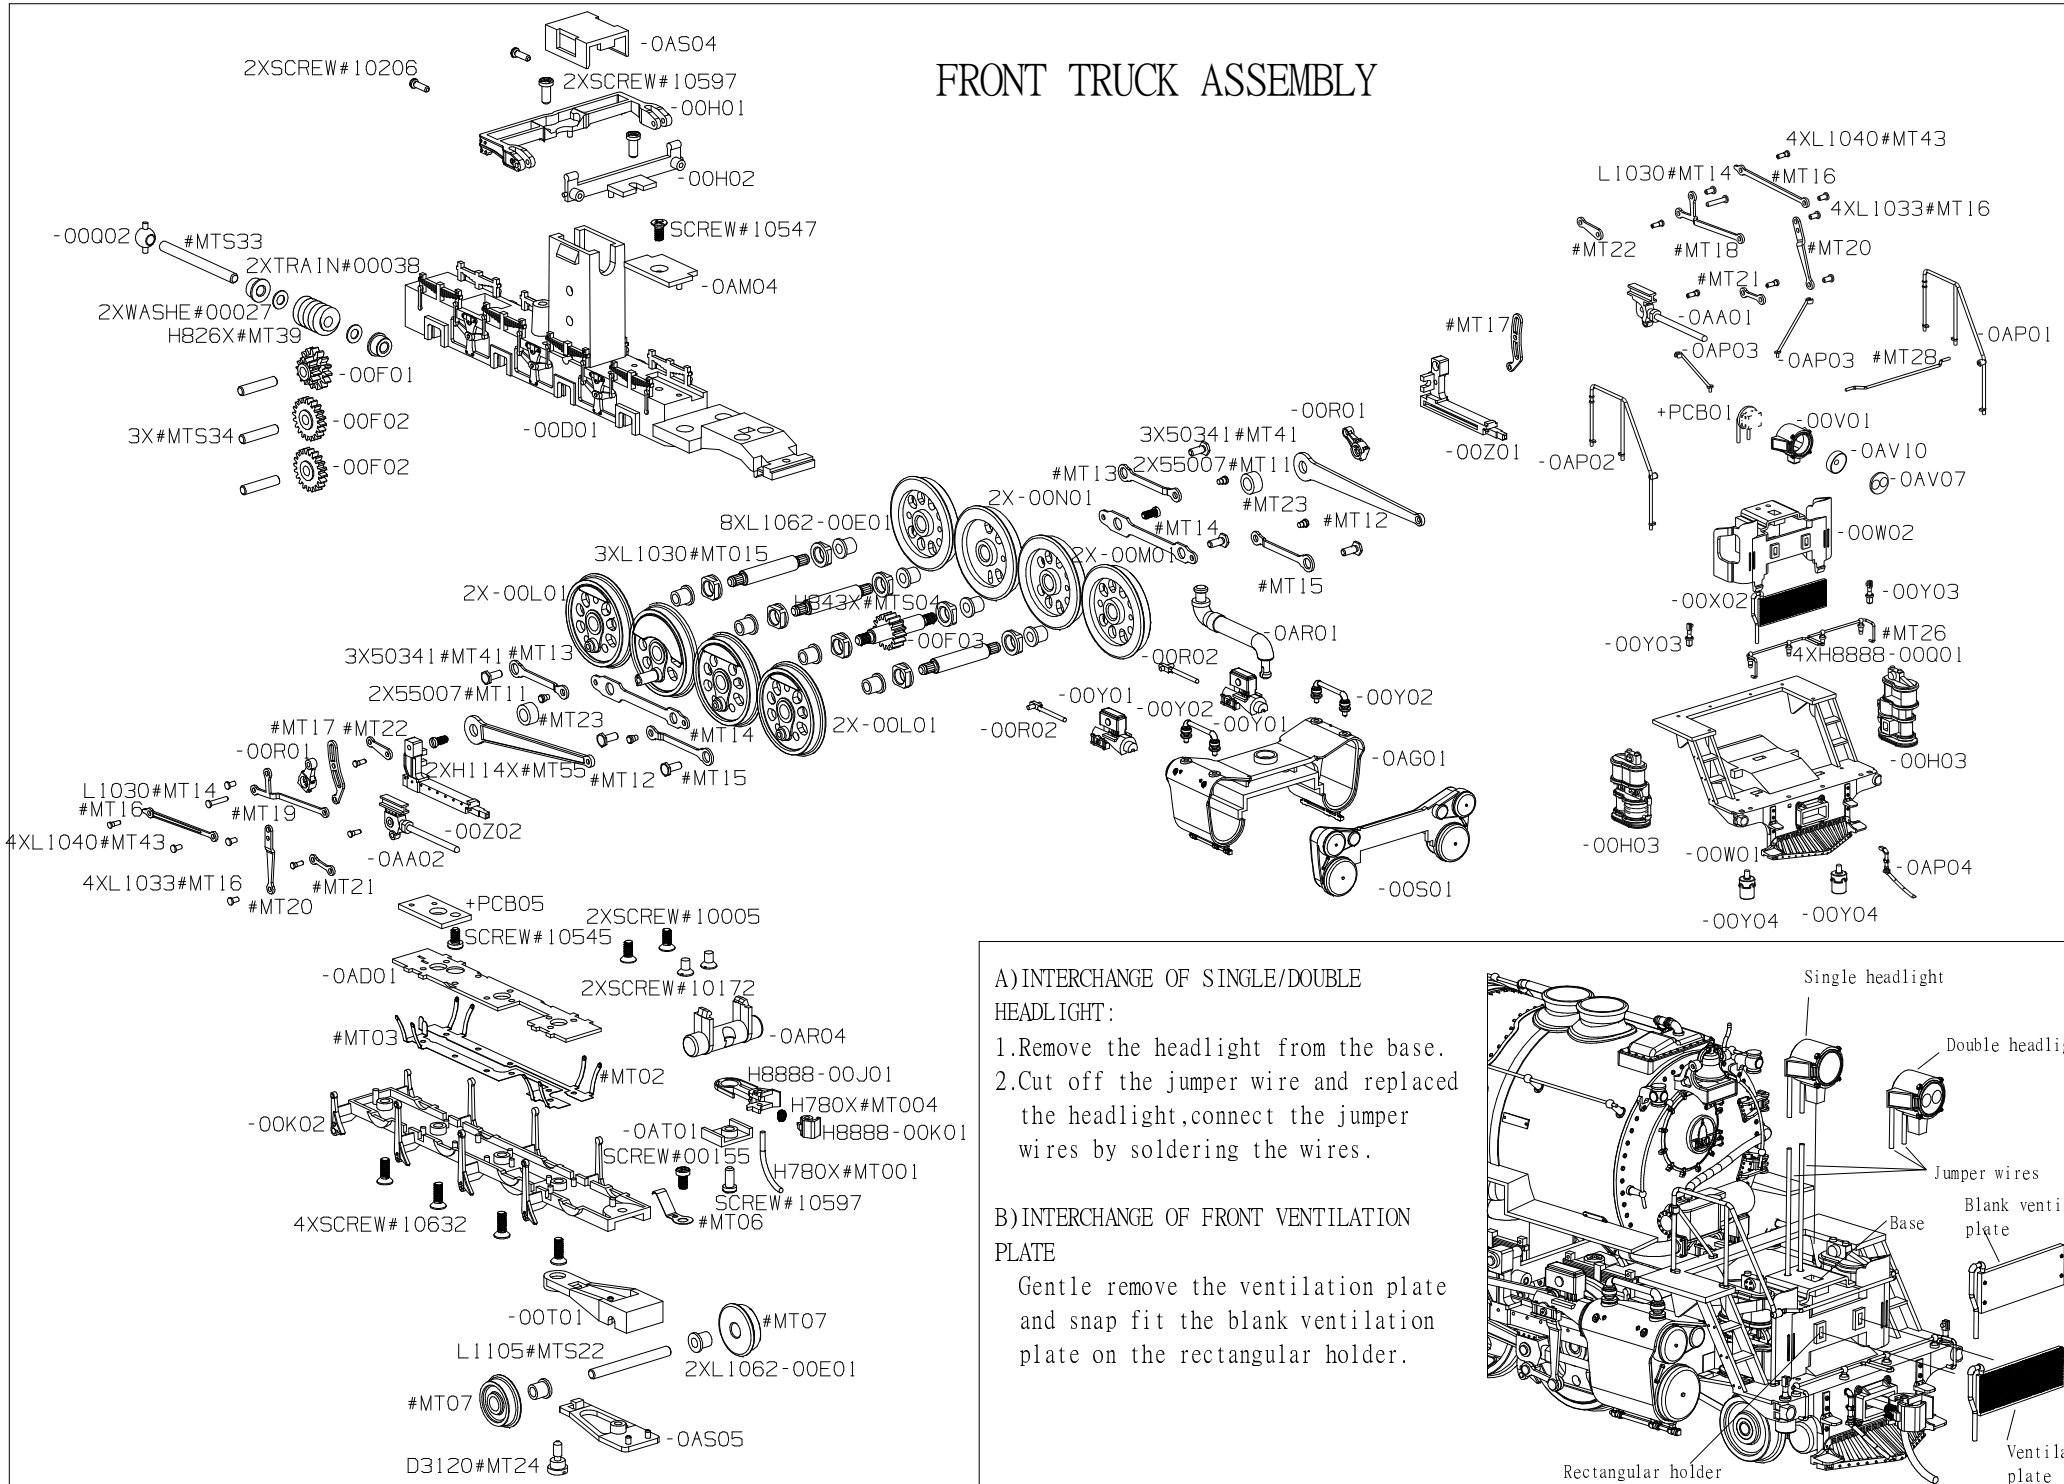

A) INTERCHANGE OF SINGLE/DOUBLE HEADLIGHT:

1. Remove the headlight from the base.
2. Cut off the jumper wire and replaced the headlight, connect the jumper wires by soldering the wires.

B) INTERCHANGE OF FRONT VENTILATION PLATE
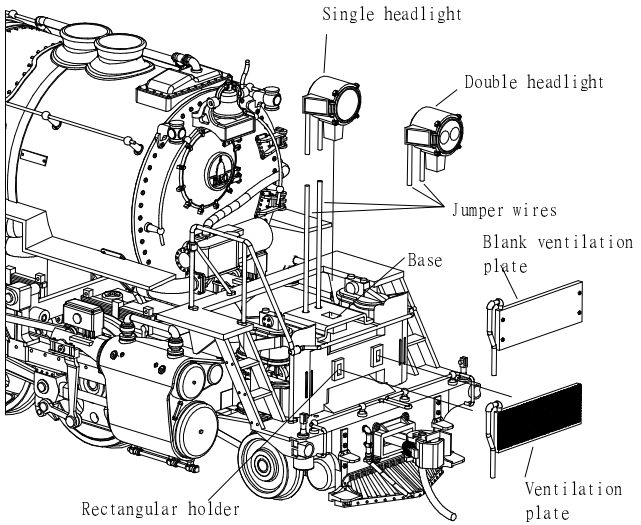
Gentle remove the ventilation plate and snap fit the blank ventilation plate on the rectangular holder.