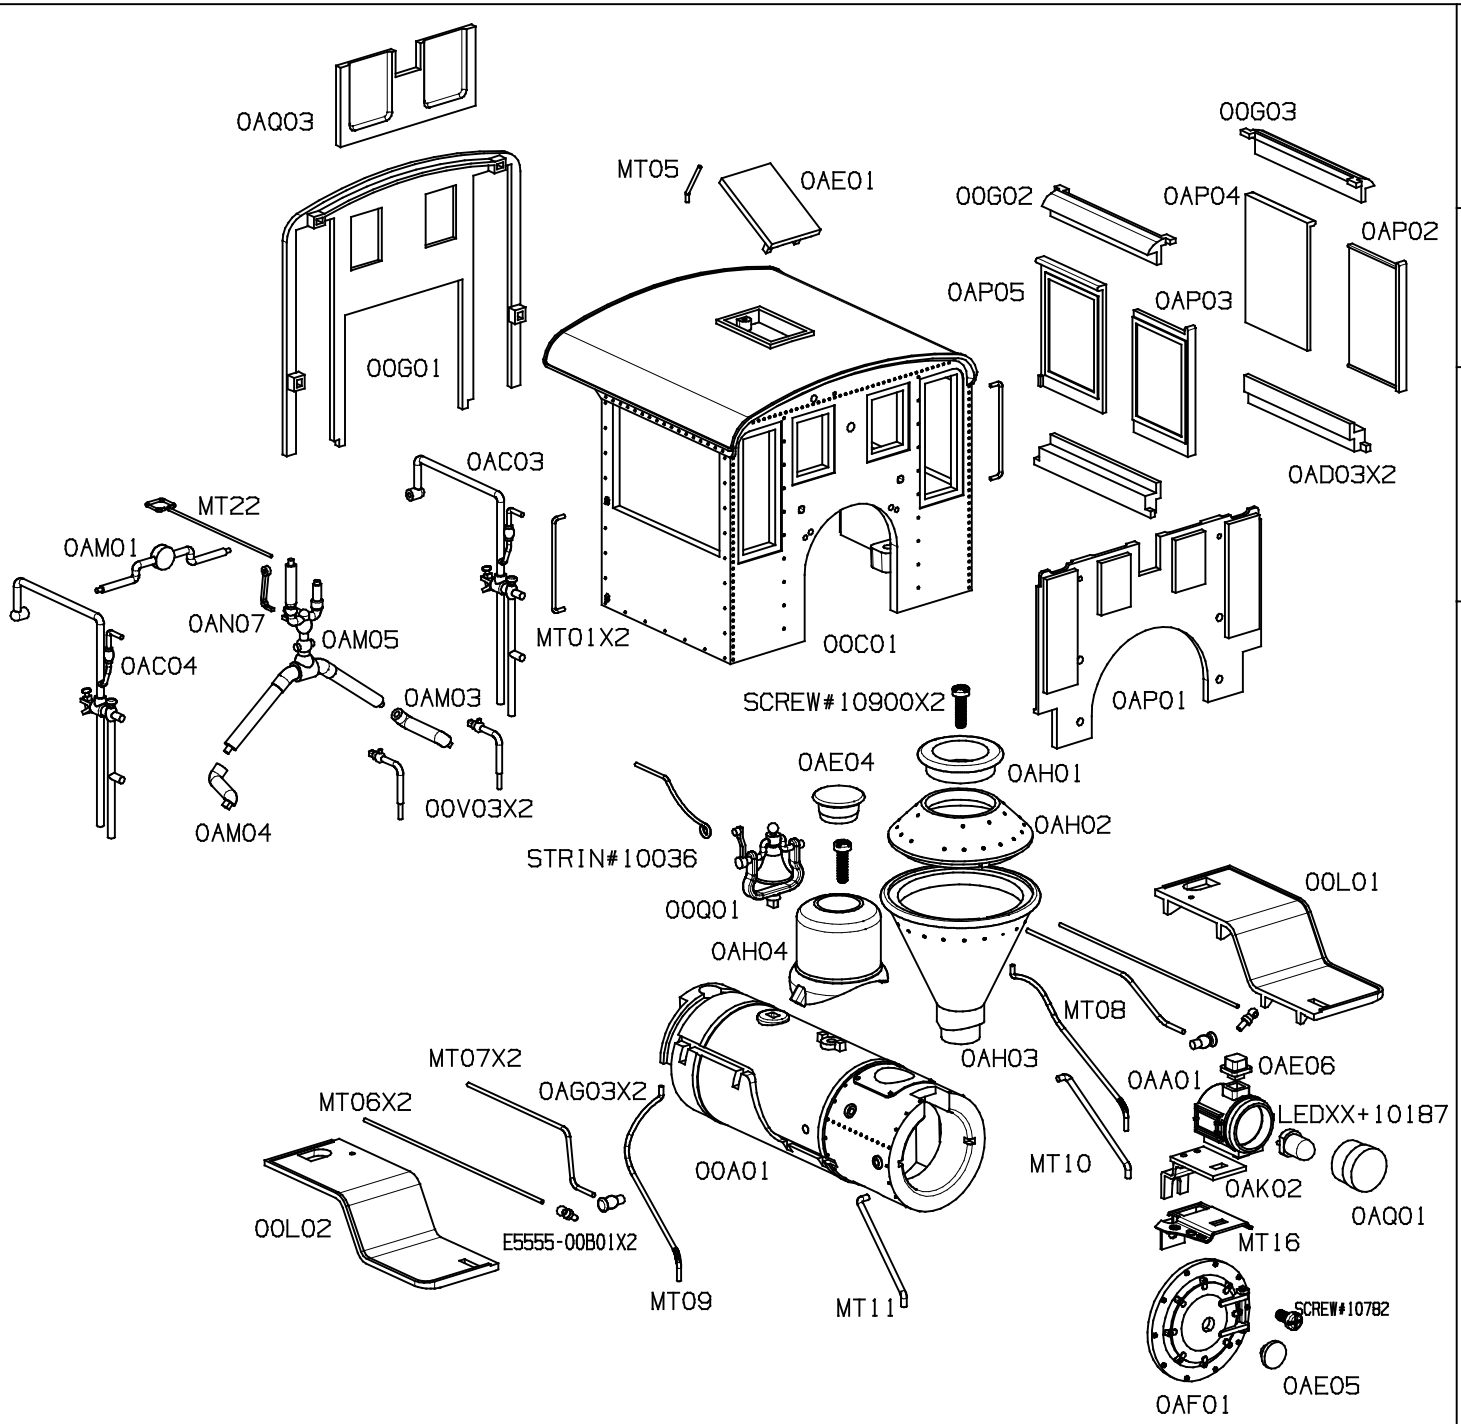

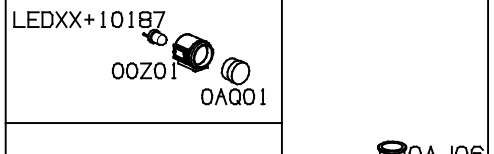

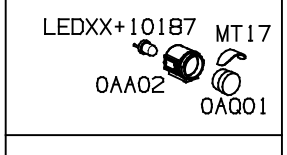

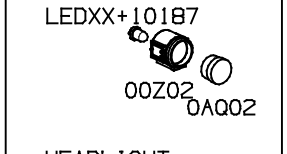

HEADLIGHT
ACCESSORY PARTS

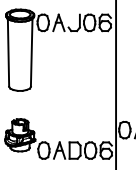

ACCESSORY PARTS

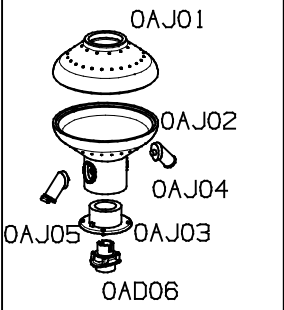

ACCESSORY PARTS

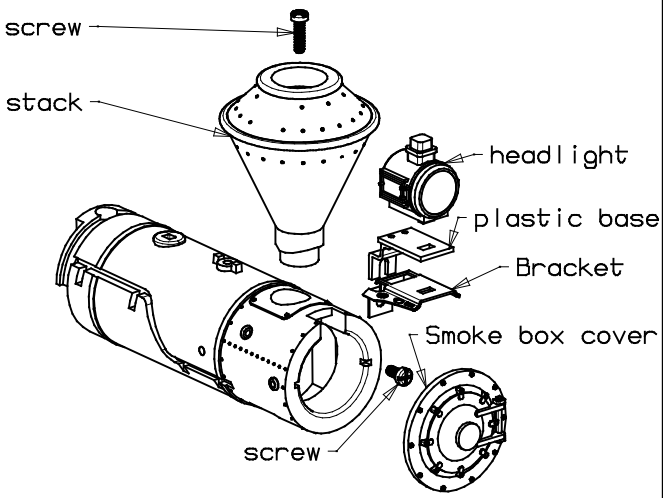

Interchange of headlight and stack

1. Remove the smoke box cover.
2. Remove the headlight bracket screw from smoke box cover inside.
3. Change the headlight and glue the headlight on plastic base if need.
4. Assembly the headlight base and bracket inside smoke box cover by a screw.
5. Change of stack,remove the screw from stack inside by a tool.
6. Assembly the stack on boiler by a screw.