




# **COVERED BRIDGE - Item No. 45992**

Snap-fit • No glue necessary • Styled after authentic American prototype • Ages 14+

#### **IMPORTANT - BEFORE STARTING:**

- If DECALS OR SIGNS ARE INCLUDED, APPLY PRIOR TO ASSEMBLY.
- CHECK CONTENTS AGAINST LIST OF PARTS.
- CAREFULLY TRIM ANY EXCESS PLASTIC FROM THE PARTS BEFORE ASSEMBLING.
- ALTHOUGH NO GLUE IS NECESSARY, YOU MAY ALSO WISH TO ADD A FEW DROPS OF STYRENE CEMENT TO
  JOINTS FOR PERMANENT CONSTRUCTION.

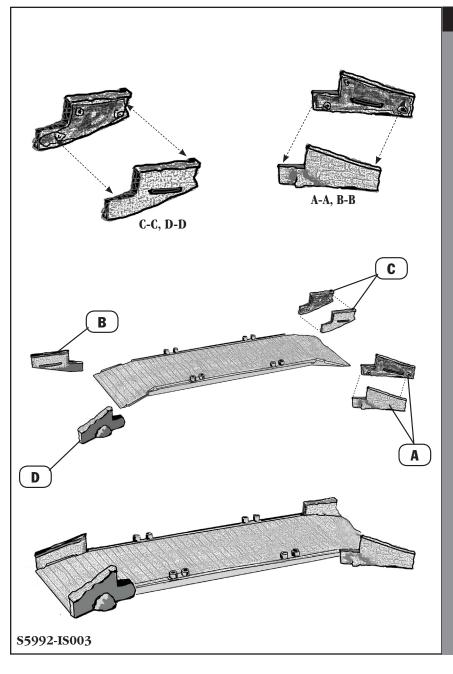


## LIST OF PARTS

#### **OTY PART NAME**

- 1 ROOF
- 2 "A" FRAME END WALLS
- 2 OPEN TOP FRAME BOARDED SIDEWALLS
- 1 BRIDGE DECK with RAMP ENDS
- 4 SLOTTED STONE WALLS (Stamped A, B, C & D)
- 4 UNSLOTTED STONE WALLS (Stamped A, B, C & D)

### **ASSEMBLY**

- Step 1 Install slotted stone walls (A, B, C & D) onto bridge deck ramp end by putting rectangular tab on wall, behind tab in bottom of deck floor. Then slip slot over tab side of ramp. Make sure stone wall faces center of bridge.
- Step 2 Install unslotted stone walls over slotted wall with same letter by aligning pins and holes, then snapping together.
- Step 3 Connect "A" Frame end walls to either end of both side walls.
- Step 4 Place this assembly on top of bridge deck, capturing sidewall pins between deck floor pins.
- Step 5 Place roof on top with roof pins on inside of end wall pins.

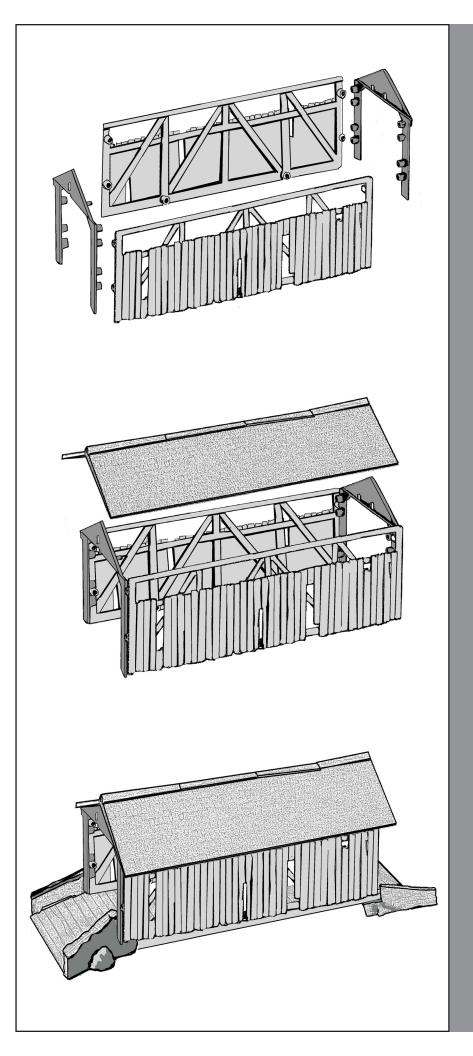

BACHMANN INDUSTRIES, INC. 1400 EAST ERIE AVENUE PHILADELPHIA, PA 19124 USA www.bachmanntrains.com



PRINTED IN CHINA