



CHANGE THE DECODER



- 1.REMOVE THE HOOD COVER
- 2.REMOVE THE DUMMY PLUG
- 3.INSTALL 8 PIN DECODER



- 4.THEN PLACE THE DECODER INSIDE THE METAL CLIP AND ADD THE METAL RETAINER PLATE.

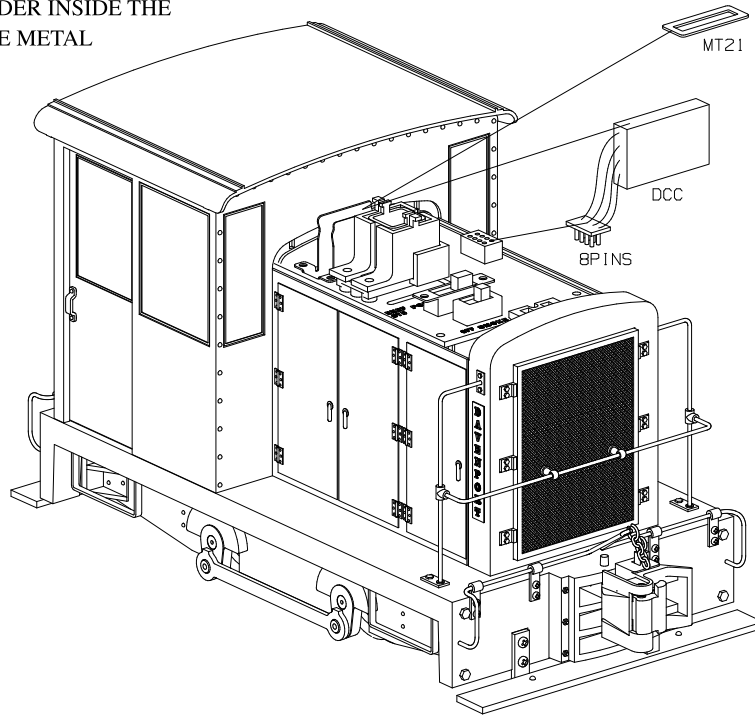


PULL UP

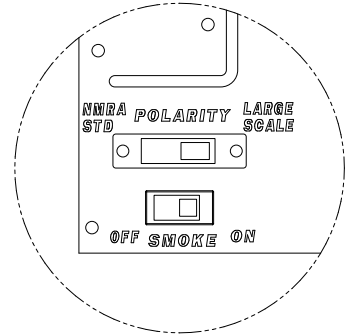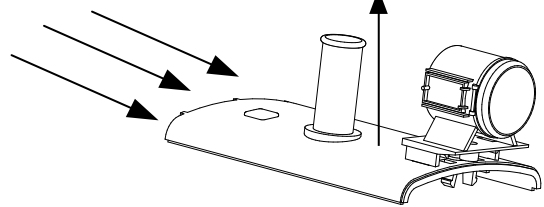

SMOKE GENERATOR AND POLARITY ARE INSIDE HOOD COVER

EXCHANGE THE FRONT/REAR DIE - CAST OFFSET SHANK COUPLERS

- 1.UNSCREW TWO SCREWS ON THE COUPLERS BOX COVER
- 2.REMOVE THE FINE SCALE COUPLERS WITH CHAIN (SHORT)
- 3.INSTALL THE OFFSET SHANK COUPLERS WITH LONG CHAIN

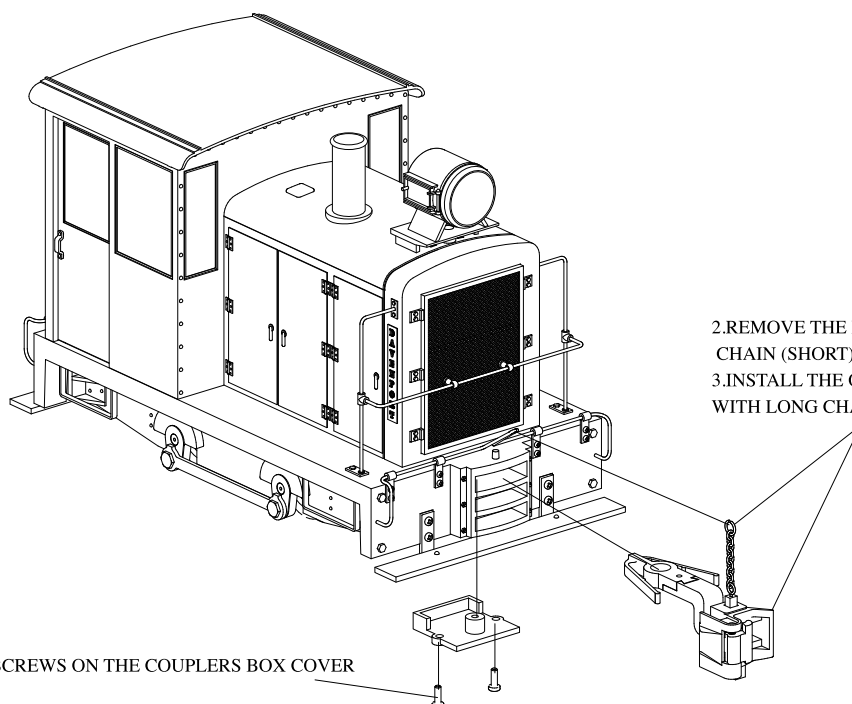


- 2.REMOVE THE FINE SCALE COUPLERS WITH CHAIN (SHORT)
- 3.INSTALL THE OFFSET SHANK COUPLERS WITH LONG CHAIN

- 1.UNSCREW TWO SCREWS ON THE COUPLERS BOX COVER

CAUTION

PLEASE TAKE OFF THE HOOD
COVER BY PULLING THE STACK ONLY!

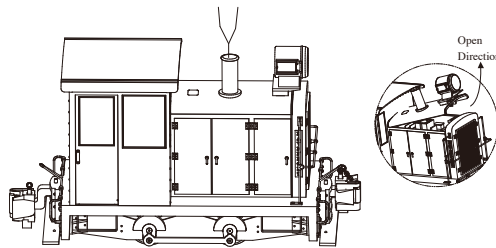

SMOKE LIQUID INSTRUCTIONS

Smoke liquid is packed with your locomotive. The liquid goes into the opening indicated in the above diagram. Squeeze only a few drops into the opening. Replenish it when the smoke stops. For best results do not overfill.

G913X-IS002