


**BACHMANN®**

# HOW TO ASSEMBLE YOUR AMTRAK® ACELA® II CONSIST

## ITEM NO. 01206 TRAIN SET CONSIST

Cars PV1, PV6, and PV9 are required for proper operation.



PC1 #2108

PV1 #3252 (First Class)

PV6 #3352 (Cafe Car)

PV9 #3451 (Quiet Car)

PC2 #2109

## #01206 TRAIN SET CONSIST with ALL SEPARATE-SALE CARS

Assemble all cars included in the set and all separate-sale rolling stock in this formation to replicate a correct prototypical consist.

*Note: Train will still be able to operate with any number/configuration of add-on cars, as long as PV1 and PV9 are at opposite ends of the consist, and PV6 is between two add-on cars.*




PC1 #2108  
Included in Set

PV1 #3252 (First Class)  
Included in Set

PV2 #3902  
Item No. 89925

PV3 #3610  
Item No. 89926

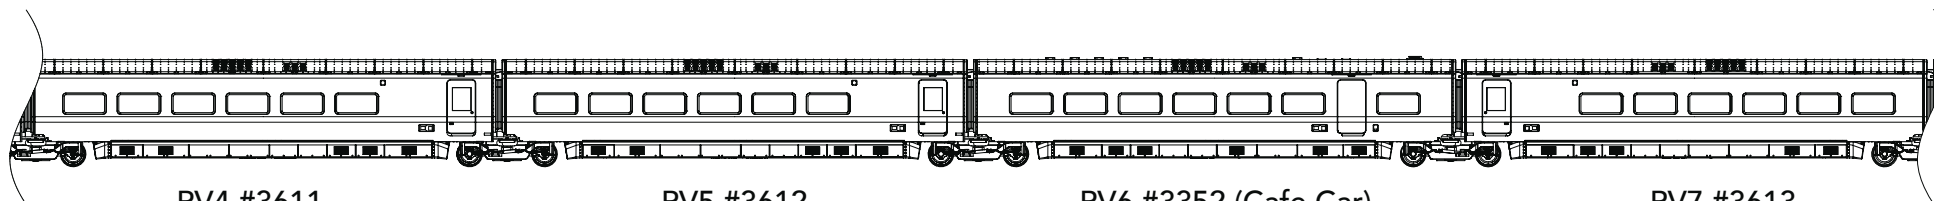


PV4 #3611  
Item No. 89927

PV5 #3612  
Item No. 89928

PV6 #3352 (Cafe Car)  
Included in Set

PV7 #3613  
Item No. 89929

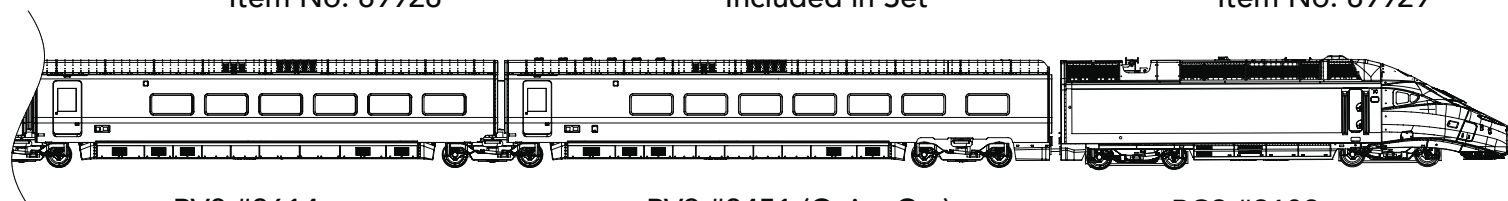

PV8 #3614  
Item No. 89930

PV9 #3451 (Quiet Car)  
Included in Set


PC2 #2109  
Included in Set

# BACHMANN®

## HOW TO COUPLE/UNCOUPLE THE CARS IN YOUR AMTRAK® ACELA® II CONSIST



Please review carefully to prevent damage during assembly/disassembly.

Holding the rubber covering clear, gently slide the truck assembly into the slots provided, making sure that the electrical contacts plug into the receptacle on the car.

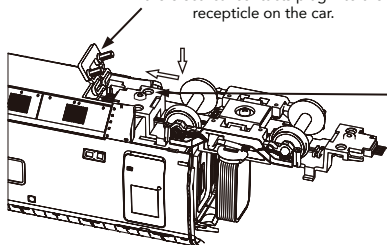

Make sure to reconnect the rubber covering so it does not drag under the car while in motion.

When uncoupling, lift the rubber covering before pulling the truck gently away from the housing.

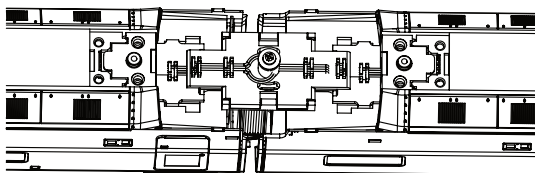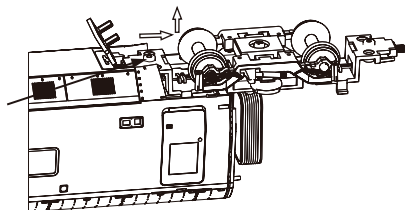

How the assembled cars should appear (trucks not shown)